

PLEASE KEEP ME WITH YOUR PROOF OF PURCHASE FOR FUTURE REFERENCE.



### Water Filled Cantilever Base

19202107

#### ATTENTION:

1. Please read these instructions carefully before assembly
2. The base is suitable for Pacific Parasol.

For more information regarding maintenance of your furniture please visit

[http://www.hartmanuk.co.uk/after\\_care\\_videos.html](http://www.hartmanuk.co.uk/after_care_videos.html)

Component's				
Parts List	Parts Picture	Description	Q'ty	Component no.
AA		Base	1	19202107AA
BB	 M8X30mm	Bolts	4	1069162
CC	 Ø8	Washers	4	1062162
DD	 M8	Allen Key	1	1051162

For replacement or lost spare parts please go to <http://faq.hartmanuk.co.uk/spares/>

Should you have any queries about your furniture your first point of contact should be the retailer from whom you purchased your product.

PLEASE KEEP ME WITH YOUR PROOF OF PURCHASE FOR FUTURE REFERENCE.



## ASSEMBLY INSTRUCTIONS

### WATER FILLED CANTILEVER BASE

(19202107)


Place the base on a soft surface. Open the cap on the top of the Base and pour water or sand inside.

**(The base is suitable for Pacific Parasol. Part C, G and E/F/J are together with Pacific Parasol.)**

Attach Rotation Base (G) to the Base by using Bolts (BB) and Washers (CC), hand tighten first. Adjust the Rotation Base (G) to be sure it is positioned correctly on the Base and finally tighten all bolts with **Allen Key (DD)**.

Attach Support Pole (C) to Rotation Base (G) by using Bolts (E) and Washers (F), hand tighten first. Adjust the Support Pole (C) to be sure it is positioned correctly on the Rotation Base (G) and finally tighten all bolts with **Allen Key (J)**.

**Please refer to the Pacific Parasol instruction for next assembly step.**

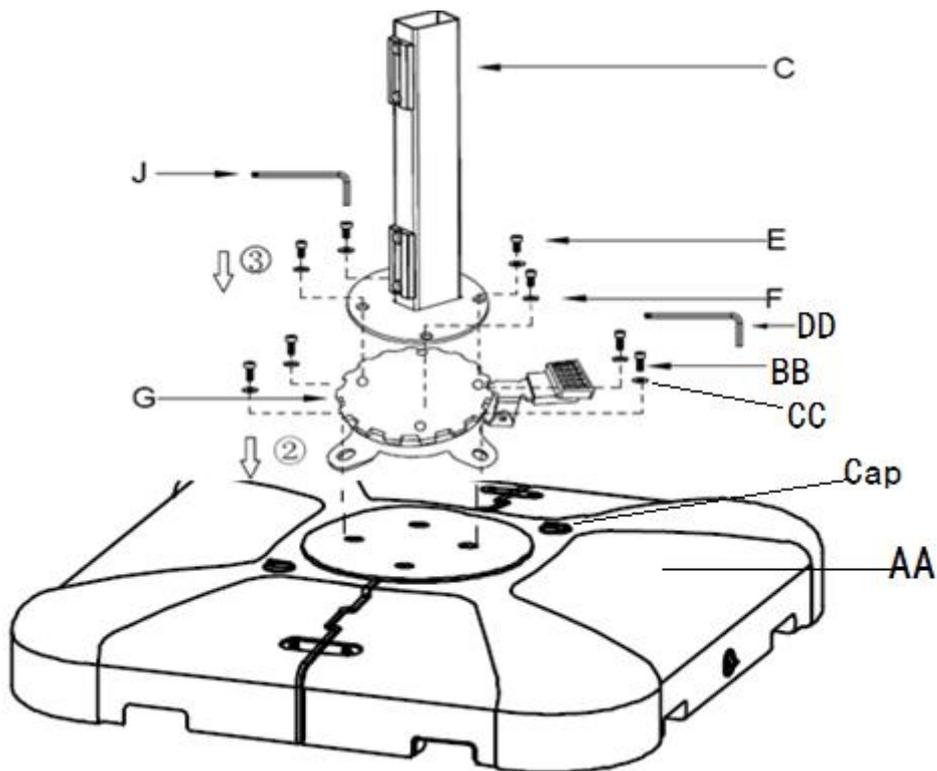

For replacement or lost spare parts please go to <http://faq.hartmanuk.co.uk/spares/>

**Should you have any queries about your furniture your first point of contact should be the retailer from whom you purchased your product.**